



DOMESTIC
GUARANTEE



URBANDECOR
PANELS & TILES

REFRESH YOUR HOME EFFORTLESSLY!

WHY CHOOSE URBAN DECOR

Designed for modern living, this advanced system combines refined aesthetics with exceptional durability. With effortless installation and minimal upkeep, it offers a sophisticated solution for home owners looking to elevate their interiors with both style and efficiency.



10 YEAR GUARANTEE

Developed with longevity in mind, UrbanDecor is supported by a comprehensive 10 year domestic guarantee, offering confidence in both quality and craftsmanship.

PLEASE NOTE

Product appearance throughout this brochure may vary slightly to the physical product. Due to printing limitations, slight product colour variations may occur between production batches. To ensure consistency across panels, we suggest ordering the full quantity required at the same time.

NATURE INSPIRED

Using cutting-edge print technology, each surface is meticulously developed to replicate the depth and character of natural materials such as stone, marble, and concrete, delivering a luxurious aesthetic without compromise.

EASY PRECISION

Our precision fit, tongue-and-groove system allows for seamless alignment and a flawless finish. This ensures a watertight and efficient fitting process to help make your room upgrade even smoother.

SURFACE PROTECTION

A high-performance protective coating shields each panel from moisture, UV exposure, and daily wear. This ensures the surface retains its original depth of colour and finish over time, while remaining effortless to clean, maintain and shine!

ENGINEERED CORE

UrbanDecor is a high-performance material designed to be strong and waterproof. It blends wood fibers for stability, polymers for water resistance, and carbon fiber for added strength without extra weight. This results in a durable, rigid core with superior strength, resilient to the everyday impacts of homelife.

KEY BENEFITS



WATERPROOF



FIRE RATED



RECYCLABLE



IMPACT RESISTANT



EASY CLEAN



SOUND INSULATING

EASY FIT

With a tongue & groove system and large format panels, UrbanDecor makes it easy to transform your bathroom or kitchen in just a few hours. Designed for quick installation, the panels can be fitted directly over most existing wall and ceiling surfaces, minimising your preparation time as well as disruption.




FIRE RATED




RECYCLABLE



SOUND INSULATING

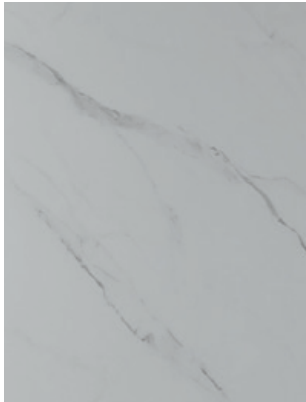

Timeless Carrara Marble Matt
FFS10-TCM ●

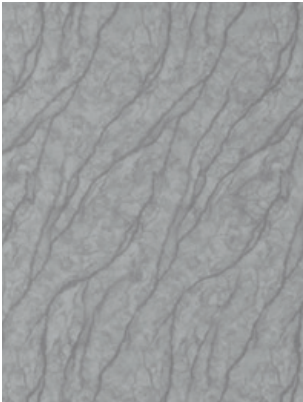

Palermo Matt
FFS10-PAL



Pisa Gloss
FFS10-PIS




Timeless Carrara Marble Gloss



White High Gloss
FFS10-WHG ●



White Matt
FFS10-WHM

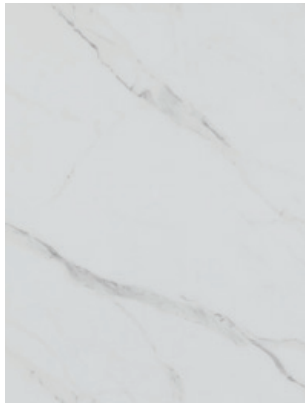

Timeless Carrara Marble Gloss
FFS10-TCMG




Fidenza Matt
FFS10-FID

● Soon to be available in 600mm width, coming September 2026.

TRIMS // 8 & 10mm

Our 8 & 10mm aluminium trims provide a clean, professional finish while safeguarding exposed edges and corners. Crafted from durable, water resistant aluminium, they help prevent moisture ingress and mould growth, supporting a hygienic and long lasting installation.

Available in black, white, satin, brushed bronze, silver in 5 different shapes to suit your requirements.

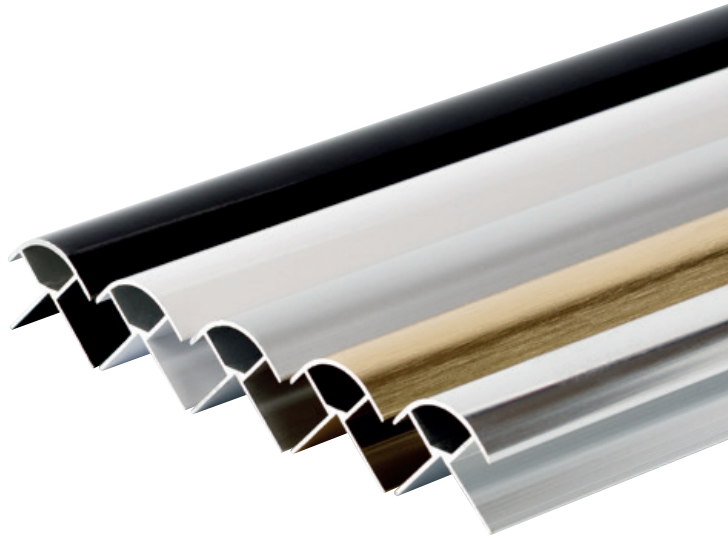

H Joint



Endcap



Angle



External Corner



Internal Corner



Arezzo Gloss
FFS10-ARZ



Concrete Black Matt
FFS10-CONB ●



Genoa Gloss
FFS10-GEN



Novaro Gloss
FFS10-NOV ●



Messina Matt
FFS10-MES

● Soon to be available in 600mm width, coming September 2026.

Genoa Gloss

PEACE OF MIND

Our easy-clean, 100% waterproof panel system delivers lasting peace of mind for every home. Designed to resist everyday impacts and withstand busy environments, the durable surface stays looking its best with minimal effort. Backed by a trusted 10 year guarantee, you can enjoy reliable performance, protection, and style for years to come.



EASY CLEAN



IMPACT RESISTANT



WATERPROOF



Modena Gloss
FFS10-MOD



Amantea Matt
FFS10-AMA




Siderno Matt
FFS10-SID



Trieste Matt
FFS10-TRI



Siena Matt
FFS10-SIE ●

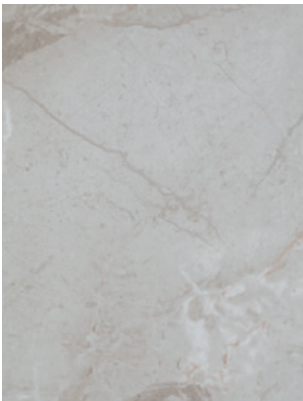

Forli Gloss
FFS10-FOR

A TIMELESS LOOK // NATURAL CHARACTER

Warm & earthy tones bring together style and practicality, creating beautifully balanced spaces that feel both luxurious and effortlessly relaxing.

By introducing these tones to your room you instantly create a calm, inviting space filled with natural character.



Rossano Matt
FFS10-ROS ●




Livorno Gloss
FFS10-LIV



Rome Matt
FFS10-ROM



Licata Matt
FFS10-LIC

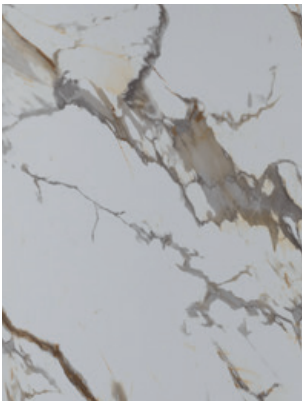

Treviso Matt
FFS10-TREV



Verona Gloss
FFS10-VER



Siderno Matt



Licata Matt

CLASSIC TILE STYLE

Quick to install, the Urban Decor Tile system avoids the mess of grout and adhesives, reducing labour time and costs. The seamless panels are low maintenance, with fewer grout lines for easier cleaning and improved hygiene. Fully waterproof and durable, they are ideal for bathrooms, kitchens, and utility rooms, helping protect walls from moisture and mould.



Argyle
FFUD-ARG



Ashton
FFUD-ASH




Buchanan
FFUD-BUC




Byre
FFUD-BY

NATURE INSPIRED

Stone and marble effect tile panels give you the real look, without the cost or maintenance. They're durable, easy to clean, and work in both modern and traditional spaces, adding a clean, natural finish wherever they're used.

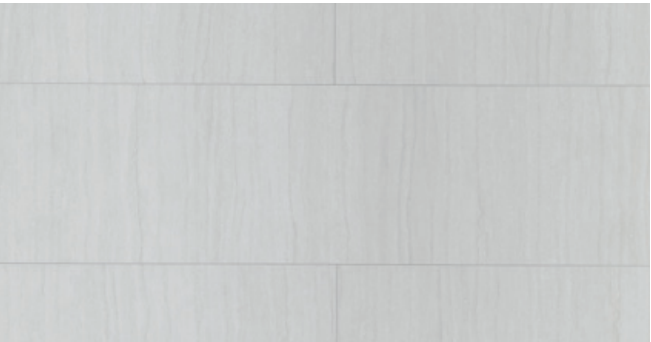


Duke
FFUD-DU

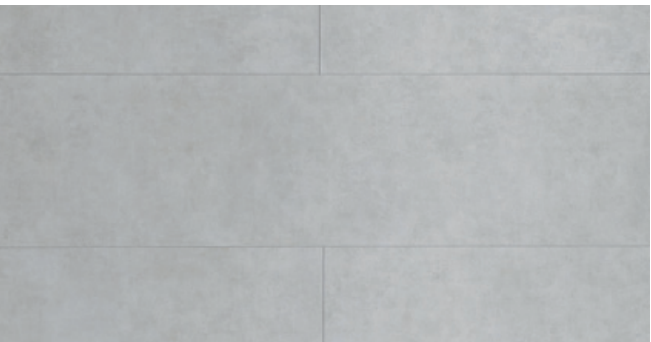

Finnie
FFUD-FIN



Kelvin
FFUD-KEL

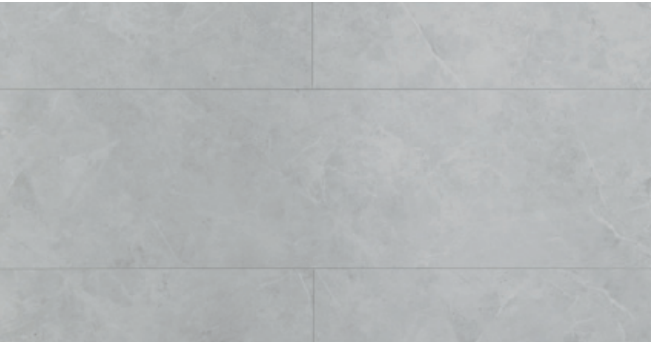

Carrick
FFUD-CAR



Dumbreck
FFUD-DUM



TILES - URBAN DECOR FITTING INSTRUCTIONS

Surface Prep: Ensure walls are clean, dry, smooth, and dust-free. Sand glossy surfaces slightly and wipe the back of each tile.

Dry Layout: Measure and level walls. Map your layout from a central focal point outward for balance, trimming pieces as needed




Cutting: Use a table saw or circular saw with a fine-tooth blade (60-tooth or higher) to avoid jagged edges (image C). Protect the front surface with painter’s tape. Alternatively, score one side with a utility knife and snap (image D); sand the snapped edges if needed.

Outlets & Switches: Mark the cutout borders. Drill a 12mm to 25mm hole in one corner (image E), complete the cut with a jigsaw (image F).

Corner & Ground Cuts: Cut off the vertical flange for corner fits (image G) and the bottom flange for floor-facing pieces (image H).

Mounting Accessories: Do not anchor fixtures directly to tiles. Drill clearance holes through them and anchor into the wall behind.

Trims & Floor Alignment: Install matching trim before inserting tiles (image I). Finish the bottom row with baseboard or molding.
- **with molding:** Align tops of the first row to a level line drawn at 300mm (image J).
- **without molding:** Draw a level line at 250mm and trim tile bottoms to fit.

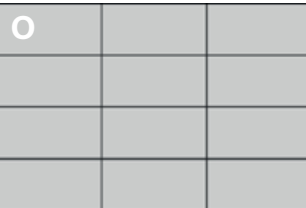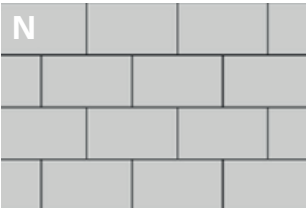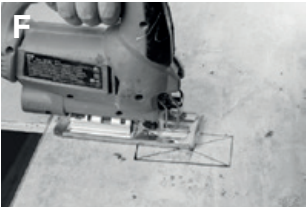

First Row Installation: Work right to left. Ensure the first piece is level; hold with shims or tape while curing (image K).

Adhesive: Lightly score the surface to help the sealant bond. Make sure to keep the scoring narrow so it is completely hidden underneath the final silicone bead. Apply a 6mm bead in a zigzag pattern across the back, plus a continuous 6mm perimeter bead (image M). One 10oz tube covers ~5 tiles.

Wet Areas (Showers): Apply a 3mm clear silicone bead inside both grooves of every tile (image A) and along cut corner edges. Follow the sealant manufacturer's guidelines.

Securing Pieces: Press tiles firmly. Hold with tape or pins if needed. Wipe wet excess adhesive immediately; dried adhesive damages the finish. Fully insert tongues into grooves (image M). For corners, cut off abutting flanges for a plumb fit.

Curing: Let the bottom row set completely (20 minutes to several hours) before moving up.

Middle Rows: Install using a running bond (staggered) or stack bond (aligned) pattern (images N, O).

Top Row: For ceiling-abutting pieces, remove the bottom and side flanges of the final piece (image P), slide into place, and press flush.

URBAN DECOR FITTING INSTRUCTIONS - PANELS

Surface Prep: Ensure walls are clean, dry, smooth, and dust-free. Sand glossy surfaces slightly and wipe the back of each panel.

Dry Layout: Measure and level walls. Map your layout from a central focal point outward for balance, trimming pieces as needed.

Cutting: Use a table saw or circular saw with a fine-tooth blade (60-tooth or higher) to avoid jagged edges. Protect the front surface with painter's tape. Alternatively, score one side with a utility knife and snap, sand the snapped edges if needed.

Outlets & Switches: Mark the cutout borders. Drill a 12mm to 25mm hole in one corner, complete the cut with a jigsaw.

Corner & Ground Cuts: Cut off the vertical flange for corner fits and the bottom flange for floor-facing pieces..

Mounting Accessories: Do not anchor fixtures directly to panels. Drill clearance holes through them and anchor into the wall behind.

Trims & Floor Alignment: Install matching trim before inserting panels. Finish the bottom row with baseboard or molding.
- **with molding:** Align tops of the first row to a level line drawn at 300mm.
- **without molding:** Draw a level line at 250mm and trim panel bottoms to fit.

Adhesive: Lightly score the surface to help the sealant bond. Make sure to keep the scoring narrow so it is completely hidden underneath the final silicone bead. Apply a 6mm bead in a zigzag pattern across the back, plus a continuous 6mm perimeter bead.

Wet Areas (Showers): Apply a 3mm clear silicone bead inside both grooves of every panel and along cut corner edges. Follow the sealant manufacturer's guidelines.

Securing Pieces: Press panels firmly. Hold with tape or pins if needed. Wipe wet excess adhesive immediately; dried adhesive damages the finish. Fully insert tongues into grooves. For corners, cut off abutting flanges for a plumb fit.

PROJECT NOTES



YOUR LOCAL SUPPLIER IS



BUILDING & GARDEN PRODUCTS

www.ffbg.co.uk | sales@ffbg.co.uk | 0141 378 7570
UNIT 2 | ASHLEY DRIVE | BOTHWELL
GLASGOW G71 8BS

scan to visit our website



www.ffbg.co.uk

part of the Fit & Forget family

